

SELF INSTALLATION GUIDE


Wall Art



design for
education™


1

Make sure wall is flat, drill holes 4mm in dibond/foamex 25mm in from the outer edge. One on each corner, one in the middle top and bottom of each panel. *Then dependant on height of the panel holes every 600mm*.*

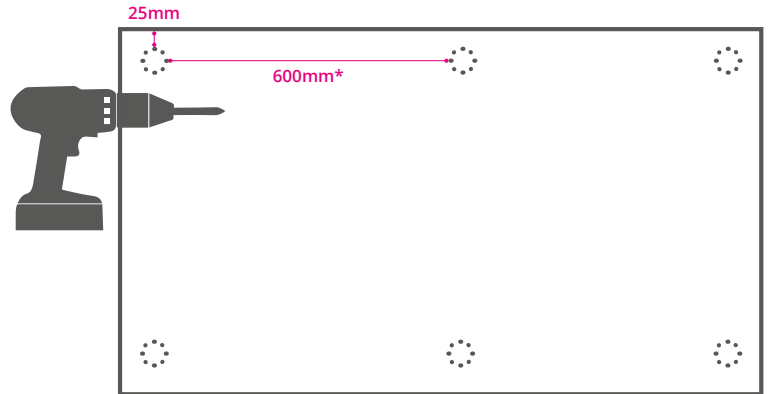


2

Put panel against the wall and ensure it's level.

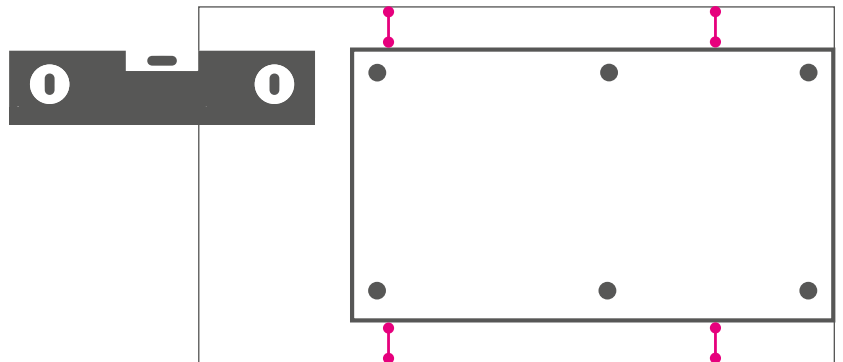


3

Mark holes in the wall and drill and plug them.

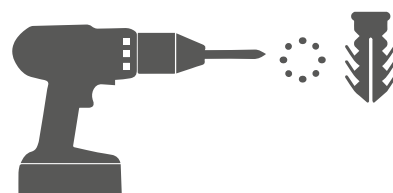

4

Offer up the panel and secure with 25-30mm size 4 screws.

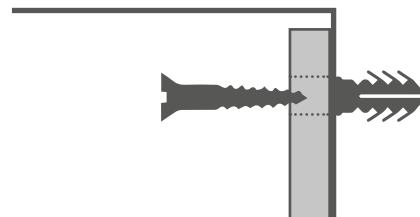

Use the appropriate screws/plugs for wall/surface intended.